


# XPERIA Z1 SOL23

## Basic Manual

## Do you have everything?

Before your start using the product, make sure that you have all the following packaged with the product.

- Xperia™ Z1<sup>\*1</sup>
- Desktop Holder (SOL23PUA)<sup>\*1</sup>

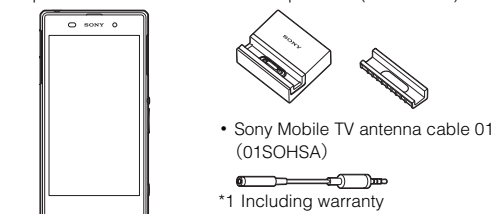

- 取扱説明書 (Instruction Manual) (Japanese)
- Xperia™ Z1のご利用にあたっての注意事項 (Cautions on using Xperia™ Z1) (Japanese)
- 携帯電話機の比吸収率などについて (Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)) (Japanese)
- 設定ガイド (Setting Guide) (Japanese)

The following items are not included in the package.

- microSD memory card
- AC adapter
- Earphones
- microUSB cable

### ❖Information

- Purchase a specified charger (sold separately).
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.

## Charging

When you purchase your product, the internal battery is not fully charged. Charge the battery before use.

### ❖Information

- When the charging starts, notification LED turns in red/orange/green according to the battery level. Green LED indicates that the battery charge reaches 90 percent or more. To check the battery level, see the status bar in the top of the Home screen. Alternatively, from the Home screen, [設定]▶[Settings]▶[About phone]▶[Status] and see "Battery level". When the battery charge reaches 100 percent, "100%" is shown on the status bar and "Battery level", "Charged" appears on the unlock screen.
- When the battery level becomes low, a pop-up window "Connect charger" appears. Tap "Battery info" to check battery usage etc.
- When you start charging with the product powered off, the power turns on even though operation is not available. Do not charge the battery in a place where the use is prohibited such as in airplane or hospital.
- It may take longer to complete for charging with a PC or while using the camera function.

### ■ Charging with the Desktop Holder

Charging with the supplied Desktop Holder (SOL23PUA) and Common AC Adapter 04 (sold separately) is explained.

## ■ For Those Requiring an English Instruction Manual

Thank you for buying "Xperia™ Z1" (simply called the "product" from here on). Before using the product, read "Basic Manual" (this manual) and "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) to ensure safe use and handling.

## About Operating Instructions

### ■ Basic Manual (this manual)

Handles only basic operations for main features. For detailed descriptions on various functions, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage. <http://www.au.kddi.com/support/mobile/guide/manual/>

- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM, ® marks may be omitted in this manual.

### ■ "Instruction Manual" (Japanese) application

This product allows you to use the "Instruction Manual" (Japanese) application on the product to confirm detailed operational procedures. Certain functions can be directly activated from the application screens on which their operations are described. **From the Home screen, [設定]▶[Basic Manual] (Japanese)**

- When you activate for the first time, follow the onscreen instructions to download and install application.

Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.

- The IMEI information of the cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone.
- Take care not to inconvenience people around you when you use the product in a public place.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- When the product is used by a child, parents or guardians should thoroughly read the "Basic Manual" "Cautions on using Xperia™ Z1" and "Specific Absorption Rate (SAR) of cell phones" and teach the child how to use it.

## Safety Precautions

Before you start using the product, make sure to read the "Cautions on using Xperia™ Z1" to ensure correct use. Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage:

<http://www.au.kddi.com/support/mobile/trouble/repair>

## When using the product

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor reception areas. Communication is sometimes interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (Though LTE/CDMA/GSM/UMTS system has highly secure confidential communication features).
- This product is compatible with the international roaming service. Each network service described in this manual varies depending on the area and service content. For details, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage.

Since this product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.

- The IMEI information of the cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone.
- Take care not to inconvenience people around you when you use the product in a public place.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- When the product is used by a child, parents or guardians should thoroughly read the "Basic Manual" "Cautions on using Xperia™ Z1" and "Specific Absorption Rate (SAR) of cell phones" and teach the child how to use it.

## ■ Use of the product is not allowed in the following places!

- Do not use a cell phone while driving a car or riding a motorbike or bicycle. Failure to do so might cause a traffic accident. Use of a cell phone while driving a car or motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations.
- Do not use this product while you are aboard an airplane. Use of electric devices transmitting radio waves in airplane is prohibited by law. Some airline companies, however, allow their passengers to use cell phones. For details, contact the airline company you use.

## Regarding notations used in this document

- In this manual, keys (key icons) are represented by simplified illustrations such as [戻る], [ホーム], [アプリ], [設定], [電源].
- Operations of tapping menu items/icons/buttons on the screen etc. are indicated as [(name of the item etc.)].

- Using 緊急通報メール (Emergency Rapid Mail) Emergency Rapid Mail is a service that distributes Earthquake Early Warning or Tsunami Warning delivered from the meteorological bureau or Disaster and Evacuation Information delivered from the government or local public organization to all au cell phones in specified areas simultaneously. When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive a Tsunami Warning, draw away from sea coast immediately and evacuate to safe place such as upland or well-built high building.
- 1 au 災害対策 (au Disaster Countermeasure) menu▶[緊急通報メール (Emergency Rapid Mail)]

## Using au 災害対策 (au Disaster Countermeasure)

You can use 災害用伝言板 (Disaster Message Board) service, 緊急通報メール (Emergency Rapid Mail) service that distributes 緊急地震速報 (Earthquake Early Warning), 災害・避難情報 (Disaster and Evacuation Information) and 津波警報 (Tsunami Warning), and 災害用音声お届けサービス (Disaster Voice Messaging Service).

- 1 From the Home screen, [au 災害対策 (au Disaster Countermeasure)] au 災害対策 (au Disaster Countermeasure) menu appears.

### ■ Using 災害用伝言板 (Disaster Message Board)

Disaster Message Board service enables you to register information of well-being from an area of distress via LTE NET in case of large-scale disaster such as earthquake with a seismic intensity of over 6 lower.

- 1 au 災害対策 (au Disaster Countermeasure) menu▶[災害用伝言板 (Disaster Message Board)]

### ❖Information

- To register information of well-being, E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand.

- Using 緊急通報メール (Emergency Rapid Mail) Emergency Rapid Mail is a service that distributes Earthquake Early Warning or Tsunami Warning delivered from the meteorological bureau or Disaster and Evacuation Information delivered from the government or local public organization to all au cell phones in specified areas simultaneously. When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive a Tsunami Warning, draw away from sea coast immediately and evacuate to safe place such as upland or well-built high building.

- 1 au 災害対策 (au Disaster Countermeasure) menu▶[緊急通報メール (Emergency Rapid Mail)]

### ❖Information

- Reception of Emergency Rapid Mail is notified by a special warning tone and vibration. It is not possible to change the warning tone.
- Earthquake Early Warning may not arrive before strong tremors in areas near the epicenter.
- Tsunami Warning is a major tidal wave/seismic sea wave notification delivered from the meteorological bureau to the area including target coast.
- Disaster and Evacuation Information is a service that distributes bulletins concerning residents' safety including evacuation advisories, evacuation orders and other warnings issued by the national and local governments.
- The service is available only in Japan (it cannot be used overseas).
- No information fee or communication charge is required for receiving Emergency Rapid Mail.
- KDDI is not liable for damages suffered by customers resulting from the service's information, lack or delay in the information caused by transmission or system breakdowns, or other events that are outside the responsibility of KDDI.

## ■ Removing au Micro IC Card (LTE)

- 1 Open the cover while hooking the groove of au Micro IC Card (LTE) slot cover with your fingernail, hook the projection of the tray with your fingernail to slide the tray straight out, then remove the tray from the main unit
- 2 Remove au Micro IC Card (LTE) out of the tray, insert the tray into the main unit and then press it all the way Pay attention to the direction of pushing the tray.
- 3 Close the au Micro IC Card (LTE) slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit


## Attaching/Removing microSD memory card

### ■ Attaching microSD memory card

- 1 Open the microSD memory card slot cover while hooking the groove with your fingernail, check the orientation for inserting, and insert it until it clicks Insert the microSD memory card with the contact side down.

## ■ Force-quitting

- 1 Open the au Micro IC Card (LTE) slot cover while hooking the groove with your fingernail, press the red OFF button for approximately three seconds, and release your finger after it vibrates three times

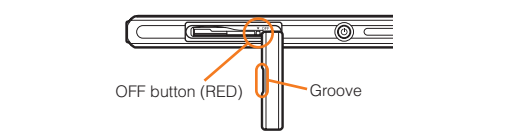

### ❖Information

- Alternatively, press and hold [電源] and upper part of the volume key at the same time for approximately three seconds, and release your finger after it vibrates three times.

## Initial settings

When you turn on the product for the first time, swipe (flick) the screen up or down to unlock screen lock and follow the onscreen instructions to set language, functions, service, etc. For details, refer to "Setting Guide".

### ❖Information

- Setup items can be set or changed later as required. To change the language later, from the Home screen, [設定]▶[Settings]▶[言語と入力 (Language & input)]▶[地域／言語 (Language)]. To make settings, from the Home screen, [設定]▶[Settings]▶[Setup guide]. To make settings for au service etc., from the Home screen, [au Easy Setting].

- Refer to the Japan Emergency Agency web page for details about distribution of Earthquake Early Warning. <http://www.jma.go.jp/>
- You cannot receive Emergency Rapid Mail when your cell phone is turned off or during a call.
- Emergency Rapid Mail may not be received when your cell phone is communicating such as while sending/receiving SMS/e-mail or using the browser, or if you are in a place where signal does not reach even in the service area (e.g. in a tunnel, basement) or in a place with a poor reception.
- You cannot receive the Emergency Rapid Mail that the reception is failed.
- This delivery system is different from Earthquake Early Warning provided through TV, radio, or other communication procedures, which means that the time the Earthquake Early Warning arrives may vary.
- Information from someplace other than your current location may be received.

## ■ Using 災害用音声お届けサービス (Disaster Voice Messaging Service)

Disaster Voice Messaging Service is a service which allows you to record your voice and send someone you want to inform your well-being in case of a large-scale disaster.

- 1 au 災害対策 (au Disaster Countermeasure) menu▶[災害用音声お届けサービス (Disaster Voice Messaging Service)]

### ❖Information

- To use Wi-Fi®, initial settings via LTE/3G network is required.
- Voice message can be recorded for up to 30 seconds.
- Voice messages cannot be saved or played if the product does not have available memory.

- 2 Close the microSD memory card slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

### ❖Information

- Insert a microSD memory card in the appropriate direction. Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card or damage.
- Do not touch the terminal of the microSD memory card.

### ■ Removing microSD memory card

Be sure to unmount microSD memory card before removing.

- 1 From the Home screen, [設定]→[Settings]→[Storage]→[Unmount SD card]→[OK] When it is unmounted, [SD card safe to remove] appears on the status bar to notify you that reading and writing from/to the microSD memory card are disabled.

- 2 Open the microSD memory card slot cover while hooking the groove with your finger, press the microSD memory card all the way until it clicks, then pull out the microSD memory card slowly "Removed SD card" appears on status bar to inform that the microSD memory card is removed.

- 3 Close the microSD memory card slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

## Screen Lock

When the screen lock is set, the backlight turns off to avoid the keys and touch panel from false operations.

- When the specified time elapses, the product's screen backlight turns off automatically and screen lock is activated.

- 1 While the screen is displayed, [電源]

### ■ Unlocking screen

The unlock screen appears when turning the power on or the backlight on by pressing [電源].

- 1 Swipe (flick) the screen up or down on the unlock screen

### ❖Information

- Drag [カメラ] left to activate the camera, and drag [右] right to add widgets such as calendar, clock, etc. on the unlock screen.

## Basic Operation

## Key icons

The followings are the main functions of [戻る], [ホーム], [アプリ] keys located at the bottom of the screen.





